

---

# Contents

<b>1. INTRODUCTION .....</b>	<b>1</b>
<b>2. TINTE PROGRAMME STRUCTURE.....</b>	<b>2</b>
2.1 FLOW SCHEME OF A TINTE CALCULATION.....	3
2.1.1 Initializing Steps.....	3
2.1.2 Output of the Restart Data and the 2-D Arrays to a File .....	4
2.1.3 The Equilibrium Calculation.....	4
2.1.4 The Transient Calculation.....	5
2.2 THE INPUT SUBROUTINES.....	5
2.3 THE NUCLEAR CALCULATION.....	6
2.3.1 The Equilibrium Solution.....	8
2.3.2 The Transient Calculation.....	9
2.4 THE TEMPERATURE CALCULATION.....	10
2.4.1 The Coolant Flow .....	12
2.4.2 Temperatures .....	13
2.4.2.1 The Gas Temperature .....	13
2.4.2.2 The Solid Temperature .....	13
2.4.2.3 The temperature distribution inside fuel elements.....	14
2.4.2.4 Gas mixing and Corrosion .....	15
2.4.3 Material Properties .....	15
2.4.3.1 Specific Heat Capacity.....	15
2.4.3.2 Thermal Conductivity .....	15
2.4.3.3 Material Properties for Gases and Gas Mixtures .....	16
2.4.3.4 Flow-Resistance and Heat-Transfer Rules.....	16
<b>3. TINTE INPUT DESCRIPTION.....</b>	<b>17</b>
3.1 INTRODUCTION .....	17
3.2 INITIALISATION RECORDS .....	18
3.3 BLOCK 1: GENERAL CONTROL DATA.....	21
3.4 BLOCK 2: GEOMETRY AND SPATIAL MESH DEFINITIONS .....	24
3.5 BLOCK 3: MATERIAL ASSIGNMENT TO THE MESH GRID FOR THERMAL-FLUID CALCULATION .....	26
3.6 BLOCK 4: MATERIAL DESCRIPTION FOR THERMAL-FLUID MATERIALS.....	28
3.6.1 General Input Data .....	28
3.6.2 Input Data for Material -1 (Heterogeneous Temperature Calculation).....	33
3.6.3 Additional Input Data .....	34
3.7 BLOCK 5: MATERIAL ASSIGNMENT TO THE MESH GRID FOR NUCLEAR CALCULATIONS .....	36
3.7.1 Final Input Data .....	38
3.8 BLOCK 6: NUCLEAR CROSS SECTION DATA.....	39
<b>4. GENERATION OF NUCLEAR CROSS SECTIONS FOR USE IN TINTE, AND THE COUPLING WITH VSOP99 .....</b>	<b>46</b>
4.1 THE SPECTRUM CODE .....	46
4.2 THE AUXILIARY CODE TO VARY THE EXPANSION PARAMETERS .....	47
4.3 THE AUXILIARY CODE TO PERFORM THE POLYNOMIAL EXPANSION .....	47
4.4 THE ITERATION OF THE REFERENCE DATA .....	47
4.5 COUPLING TO BURN-UP CODE SYSTEM .....	47
4.5.1 The Coupling to VSOP99 .....	47
4.5.2 Identical spatial mesh .....	48
4.5.3 Changing the spatial mesh .....	48
4.6 PROCEDURE TO PRODUCE THE .TN4 FILE FROM THE VSOP99 OUTPUT FILES “NAKURE” AND “TINTE” .....	48

---

<b>5. TINTE CALCULATIONAL PROCEDURE .....</b>	<b>57</b>
5.1 PROCEDURE TO PRODUCE A TINTE STEADY-STATE (OR EQUILIBRIUM) CALCULATION .....	57
5.2 PROCEDURE TO PRODUCE A TINTE TRANSIENT CALCULATION.....	64
5.3 SAMPLE ERROR AND WARNING MESSAGES.....	66
<b>6. TINTE CONTROL COMMANDS.....</b>	<b>69</b>
6.1 COMMAND FORMAT .....	69
6.2 NUCLEAR AND THERMAL RAMPS.....	70
6.2.1 Nuclear Ramps .....	70
6.2.1.1 Nuclear Ramps on Fractions of Materials with Overlaying Cross-Section Sets.....	70
6.2.1.2 Global Nuclear Ramps and Control Rod Movements .....	71
6.2.2 Ramps for Solid Materials Parameters.....	73
6.2.3 Ramps for Gas Flow Parameters .....	75
6.3 THE EXECUTION OF TINTE CONTROL COMMANDS.....	78
<b>7. TINTE OUTPUT DESCRIPTION.....</b>	<b>85</b>
<b>8. TINTE VERSION HISTORY .....</b>	<b>92</b>
8.1 CODE VERSIONS RELEASED BY FZJ .....	92
8.1.1 Versions from 1985 until March, 2001.....	92
8.1.2 First External Release Version, Rel. 1.1, Vs. 301c, April 2001 .....	92
8.1.3 Rel. 1.2, Vs. 501x, June 2001 .....	92
8.1.4 Rel. 1.3, Vs. 801a, September 2001 .....	93
8.1.5 Rel. 1.4, Vs. 1002xp, October 2002 .....	93
8.1.6 Rel. 1.41, Vs. 1202xp, January 2003 .....	94
8.1.7 Rel. 1.42, February 2003.....	94
8.1.8 Rel. 1.5, Vs. 403xp, April 2003 .....	94
8.1.9 Rel. 2.02, Vs. 204d, 27 February 2004 .....	94
8.1.10 Rel. 2.03, 8.03.04 .....	95
8.1.11 Rel. 2.1, 11.05.04, TINTE vs. 504 .....	95
8.1.12 Rel. 2.11, 20.09.04 .....	95
8.1.13 Rel. 2.2, 12.11.04, TINTE vs. 504a .....	95
8.1.14 Rel. 2.21, 3.12.04, TINTE vs. 504b .....	96
8.1.15 Rel. 2.3, 11.03.05 .....	96
8.1.16 Rel. 2.31, 17.05.05 .....	96
8.1.17 Rel. 2.4, 10.1.06, TINTE vs. 504e .....	96
8.1.18 Rel. 2.5, 8.04.06, TINTE vs. 504f .....	97
8.1.19 Rel. 3.0, 22.06.06, TINTE vs. 306 .....	97
8.1.20 Rel. 3.01, 2.07.06, TINTE vs. 306a .....	98
<b>9. APPENDIX A: IMPROVEMENT OF RADIATION TRANSFER CALCULATIONS IN TINTE .....</b>	<b>99</b>
<b>10. APPENDIX B: RADIATION HEAT TRANSFER BETWEEN DIFFERENT TYPES OF FUEL ELEMENTS .....</b>	<b>101</b>
<b>11. APPENDIX C: HEAT CAPACITY RULES IN WKPT.....</b>	<b>104</b>
<b>12. APPENDIX D: HEAT CONDUCTIVITY IN XLAMT .....</b>	<b>107</b>
<b>13. APPENDIX E: LINEAR ROD MOTION MODEL (ROMO).....</b>	<b>115</b>
13.1 INTRODUCTION .....	115
13.2 METHOD FOR THE LINEAR ROD MOTION SIMULATION .....	115
13.3 A REACTIVITY CONTROLLER PROGRAM WITH AUTOMATIC ROD MOVEMENTS.....	116
13.4 IMPLEMENTATION AND PROGRAM STRUCTURE OF THE ROMO CODE .....	116
13.5 INPUT DESCRIPTION FOR THE ROD MOTION FEATURE IN TINTE.....	117
13.5.1 Using TINTE Overlay Compositions with ROMO .....	117
13.5.2 Definition of the Rod Motion Model to be Used.....	118

---

---

13.5.3 Rod Motion Ramps .....	120
13.5.4 Reactivity Control and Reactivity Ramps with Automatic Rod Movements .....	121
13.6 ROMO OUTPUT DESCRIPTION .....	123
13.6.1 Console and Printer File Outputs .....	123
13.6.2 Plot Data File for the Scalar Time Functions (the .ptr file) .....	123
13.7 EXAMPLES .....	124
13.7.1 Rod Movements .....	124
Case TWCR-ROMO .....	124
Case RM3-3093-blk06 ("S-curves") .....	125
13.7.2 Automated Rod Control .....	127
<b>14. APPENDIX F: MODELLING AIR AND WATER INGRESS TRANSIENTS .....</b>	<b>128</b>
<b>15. APPENDIX G: CASE STUDY EXAMPLES .....</b>	<b>131</b>
15.1 PURE THERMAL HYDRAULIC MODELING .....	131
15.2 PURE NEUTRONICS MODELING.....	133
<b>16. REFERENCES .....</b>	<b>135</b>

## FIGURES

Figure 1: Modular structure of TINTE - The diagram shows the principal time discretization.....	2
Figure 2: Calculating the nuclear power distribution. ....	7
Figure 3: The temperature determination process in TINTE.....	11

## TABLES

Table 1: Control Flag Values for the Second Initialization Record.....	18
Table 2: Initialisation Control Flag Interpretation.....	19
Table 3: Control Flag Interpretations for Input Block 1 .....	21
Table 4: First Card Variables of Input Block 1 .....	22
Table 5: Second Card Variables of Input Block 1 .....	23
Table 6: Third Card Variables of Input Block 1.....	23
Table 7: 1-D Flow Network Card Variables .....	26
Table 8: First Card Variables for the TM Block .....	29
Table 9: Second Card Variables for the TM Block .....	31
Table 10: Heterogeneous Temperature Card Variables for Fuel Pebble Layers.....	34
Table 11: KG* Block Input Card Variables for General Pebble Bed Parameters.....	36
Table 12: Cross- Section and Expansion Coefficients Data for the Fast and Thermal Groups: First 2 Cards .....	40
Table 13: Cross- Section and Expansion Coefficients Data for the Fast and Thermal Groups: Card 3 .....	41
Table 14: Cross- Section and Expansion Coefficients Data for the Fast and Thermal Groups: Card 4 .....	41
Table 15: Decay Heat Production Parameters.....	43
Table 16: Decay Heat Modification Parameters .....	43
Table 17: Example of Fuel Irradiation History Input .....	44
Table 18: Input for a Mixture of Pebble Types .....	45
Table 19: TINTE Flag Detail .....	61
Table 20: Transient Control Variables .....	69
Table 21: Nuclear Ramp Control Variables .....	70
Table 22: Nuclear Ramp Control Example .....	71
Table 23: Global Nuclear Ramp Control Variables .....	72
Table 24: Solid Material Ramp Control Variables .....	73
Table 25: Gas-Flow Ramp Control Variables .....	75

---

Table 26: TINTE General Control Commands: Group 1 .....	78
Table 27: TINTE General Control Commands: Group 2 .....	79
Table 28: TINTE Control Commands for the -11 Option: Group 1 .....	81
Table 29: TINTE Control Commands for the -11 Option: Group 2 .....	83
Table 30: TINTE Equilibrium Iteration Monitor Output Description .....	86
Table 31: TINTE Transient Time Step Monitor Lines Output Description .....	90
Table 32: ROMO Input Parameters.....	118
Table 33: Rod Motion Ramp Parameters.....	121
Table 34: Automatic Reactivity Control Ramp Parameters.....	122