

# CONTENTS

<b>1</b>	<b>INTRODUCTION</b>	<b>1</b>
<b>2</b>	<b>THE INTEGRAL TRANSPORT EQUATION</b>	<b>6</b>
<b>3</b>	<b>THE COLLISION PROBABILITY METHOD</b>	<b>10</b>
<b>4</b>	<b>REPRESENTATION OF THE COLLISION PROBABILITIES BY ESCAPE PROBABILITIES</b>	<b>14</b>
<b>5</b>	<b>COMPUTATION OF THE ESCAPE AND COLLISION PROBABILI- TIES AND THE TRANSPORT COEFFICIENTS</b>	<b>16</b>
5.1	General Considerations . . . . .	16
5.2	Cylindrical Geometry . . . . .	16
5.3	Spherical Geometry . . . . .	26
5.4	Albedo Boundary Condition . . . . .	29
5.5	Application of the Reciprocity Relation and Normalization . . . . .	31
<b>6</b>	<b>ITERATION TECHNIQUES</b>	<b>34</b>
6.1	Power Iteration Method and Source Iterations . . . . .	34
6.2	Renormalization . . . . .	38
6.3	Over-Relaxation . . . . .	39
<b>7</b>	<b>CROSS SECTION DATA</b>	<b>44</b>
7.1	General Considerations . . . . .	44
7.2	MUPO Cross Section Library . . . . .	44
7.3	Free-Gas Scattering Kernels . . . . .	47
7.4	The Westcott Formalism . . . . .	49
<b>8</b>	<b>THE MUPO LIBRARY FORMAT</b>	<b>50</b>

<b>9 CELL-WEIGHTED AND “INNER-CELL”-WEIGHTED CROSS SECTIONS</b>	<b>54</b>
<b>10 THE METHOD OF “EQUIVALENT” CROSS SECTIONS</b>	<b>57</b>
<b>11 DESCRIPTION OF THE TOTMOS SUBROUTINES</b>	<b>63</b>
<b>12 INPUT INSTRUCTIONS</b>	<b>70</b>
12.1 Input Data . . . . .	70
12.2 TOTMOS Input/Output Specifications . . . . .	75